

Mitigating Fire Risks in Mission Critical Facilities

White Paper 83

Revision 2

by Victor Avelar

> Executive summary

This paper provides a clear understanding of the creation, detection, suppression, and prevention of fire within mission critical facilities. Fire codes for information technology (IT) environments are discussed. Best practices for increasing availability are provided.

Contents

Click on a section to jump to it

Introduction	2
Fire detection system types	4
Fire suppression system types	7
Pull stations and signal devices	11
Control systems	12
Mission critical facilities	13
Industry best practices	14
Conclusion	16
Resources	17

Introduction

Today's data centers and network rooms, more than ever, are under enormous pressure to maintain operations. Some companies risk losing millions of dollars with one single data center glitch. Therefore it is not hard to believe that in the event of a catastrophic data center fire, a company may not only lose millions, but may also go out of business.

According to the National Fire Protection Association (NFPA), there were 125,000 non-residential fires in 2001 with a total of 3.231 billion dollars in losses.¹ Industry studies tell us that 43% of businesses that are closed by a fire never reopen. And 29% of those that do open fail within 3 years. It is no wonder why when designing data centers; fire prevention, detection and suppression are always top concerns. Fires in data centers are typically caused by power problems in raceways, raised floors, and other concealed areas. This is one of the reasons why raised floor plenums must be properly specified with fire protection equipment. Data center fires are also caused by arson, corporate sabotage, and natural occurrences such as lightning and power surges. Like any other critical system in a data center, fire protection must be redundant and fault tolerant in order to increase the overall data center availability.

Fire prevention provides more protection against fire than any type of fire detection or suppression equipment available. Simply put, if an environment is incapable of breeding a fire then there will be no threat of fire damage to the facility. If a fire does occur the next step is to detect it. Before fire alarms were invented, watchmen were responsible for spotting fires and alerting others. Now there are a number of advanced detectors that can detect fire in its incipient stages and then notify a central center that notifies personnel and suppression systems. Some of the first fire detection devices were nothing more than a water valve tied to a rope with a weight attached. In the event of a fire, the rope would burn through thereby opening the water valve. Fortunately, fire protection systems have come a long way with the advent of technology. Today there are many ways of detecting and suppressing fires, but only a few are recommended for data center applications. In a data center, the main goal of the fire protection system is to get the fire under control without disrupting the flow of business and without threatening the personnel inside.

Data center design standards – NFPA codes

NFPA, National Fire Protection Association, was established in 1896 to protect the public against the dangers of electricity and fire. Its mission is “to reduce the worldwide burden of fire and other hazards on the quality of life by developing and advocating scientifically based consensus codes and standards, research, training, and education.” NFPA today is a worldwide organization that has created many standards one of them being NFPA 75. NFPA 75 is the standard for the protection of electronic computer / data processing equipment. Several of items listed in the **Industry best practices** section of this white paper are a result of the NFPA 75 standard. One important exception provided by the 1999 edition of NFPA 75 (6-4.2.1) allows data centers to continue to power the electronic equipment upon activation of a gaseous agent total flooding system. This exception is valid for a data center with the following risk considerations (NFPA 75, 2-1):

1. Economic loss from loss of function or loss of records
2. Economic loss from value of equipment
3. Life safety aspects of the function
4. Fire threat of the installation to occupants or exposed property

¹ National Fire Protection Association NFPA, Fire Analysis and Research Division.






*Does not include the events of 9/11/01, where there was \$33.44 billion in property loss.

Gaseous agents will be discussed later in depth. NFPA continuously updates its standards therefore it is recommended that the latest standards be reviewed prior to designing or retrofitting a fire protection system into a data center. One must be aware that in most cases the Authority Having Jurisdiction (AHJ) has final say in what can or can not be done in regards to fire protection systems.

Classification of fires

Fires are categorized by five classes: Class A, B, C, D, and K. The five classes are described in **Figure 1** and are accompanied by the standard picture symbol used to identify what fires an extinguisher may be used on. Fire hazards in data centers are usually categorized as Class A and C hazards due to their content. Class B chemicals should not be stored in data centers.

Figure 1
Classes of fire

Class	Type of fire	Symbol
A	Fires involving ordinary combustibles such as paper, wood, cloth and some plastics.	
B	Fires involving flammable liquids and gases such as oil, paint lacquer, petroleum and gasoline.	
C	Fires involving live electrical equipment. Class C fires are usually Class A or Class B fires that have electricity present.	
D	Fires involving combustible metals or combustible metal alloys such as magnesium, sodium and potassium.	
K	Fires involving cooking appliances that use cooking agents such as vegetable or animal oils and fats.	

In order for fire to exist, three elements are required. This is often taught as the “Fire Triangle”. Oxygen, heat, and fuel must all interact for a reaction to take place otherwise known as fire. If one or more of these three elements are taken away, fire cannot exist. Therefore, fire extinguishing methods can vary depending on which element(s) are removed. For instance CO₂ systems reduce oxygen by displacing it with a heavier CO₂ gas. And because the CO₂ gas is much colder than the fire, it hampers its progression by taking away heat.

Once a fire is started it is often categorized in stages of combustion. There are four stages of combustion; the incipient stage or pre-combustion, visible smoke stage, flaming fire stage,

and intense heat stage. As a fire progresses through these stages, many factors increase exponentially, including smoke, heat, and property damage. Not to mention risk of life, which becomes critical as smoke density increases. Fire research has shown that the incipient stage allows for the largest window of time to detect and control the progression of a fire. It is in this window of time that fire detection systems can mean the difference between availability and unavailability. The longer the fire burns the more products of combustion, which then leads to a higher chance of equipment failure even if the fire is successfully extinguished. These products of combustion may be electrically conductive and can also corrode the circuits on IT equipment. In these next few sections, we will discuss available solutions for detecting and suppressing fires in a data center.

Choosing a fire protection solution

For the purposes of designing a fire protection solution for a data center, three conditions should be met; identify the presence of a fire, communicate the existence of that fire to the occupants and proper authorities, and finally contain the fire and extinguish it if possible. Being familiar with all technologies associated with fire detection, alarming, and suppression will ensure a sound fire protection solution. Of course prior to selection of a detection and suppression methodology, the design engineer must assess potential hazards and issues. Will the data center have raised floors? Will it have high ceilings? Will personnel occupy the area? Will detectors be obstructed in any way? These questions, and many more like them, should be answered before the proper fire protection solution is chosen. Although a good deal of footwork is still necessary, technology is making it easier and safer to design fire protection solutions. The following section describes each of the components utilized in a complete fire protection solution for data centers.

Fire detection system types

Three main types of detectors are available; smoke detectors, heat detectors, and flame detectors. For the purposes of protecting a data center, smoke detectors are the most effective. Heat and flame detectors should not be used in data centers as they do not provide detection in the incipient stages of a fire and therefore do not provide early warning for the protection of high value assets.

Spot type smoke detection

Spot type or conventional smoke detectors can cover an area of about 900 square feet (84 square meters). Spacing in data centers and computer rooms is usually reduced to compensate for the high air flow required in these environments. The greater the number of air changes in the room, the more detectors should be placed per square foot as shown in **Table 1**. A default standard for high air movement areas in the industry is usually one per every 250 ft² (23 m²). Spot type detectors are effective in small data centers and computer rooms. Although more expensive, intelligent, detectors are available they would add little value these smaller spaces. There are two types of spot type detectors; photoelectric and ionization.

Air changes per hour	Area per detector (ft ²)	Area per detector (m ²)
60	125	11.6
30	250	23.2
20	375	34.8
15	500	46.4
12	625	58.1
10	750	69.7
8.6	875	81.3
7.5	900	83.6
6.7	900	83.6
6	900	83.6

Source: NFPA 72 - National Fire Alarm Code (2007)

Table 1

Quantity of smoke detectors as a function of air changes

Photoelectric detectors work by using a light source or beam and a light sensor perpendicular to it. When nothing is in the chamber the light sensor does not react. When smoke enters the chamber, some of the light is diffused and reflected into the light sensor causing it to enter into an alarm condition.

Ionization detectors use an ionization chamber and a small amount of radiation to detect smoke. Normally the air in the chamber is being ionized by the radiation causing a constant flow of current, which is monitored by the detector. When smoke enters the chamber it neutralizes or disrupts the ionized air thereby causing the current to drop. This triggers the detector into an alarmed condition.


Intelligent spot-type very early smoke detection

Intelligent spot-type detectors, shown in **Figure 2**, are very similar to conventional spot-type detectors except that they work with an addressable intelligent fire alarm control panel that can report the location of a fire more precisely. Intelligent spot type detectors are available as photoelectric or ionization detectors. What makes these detectors intelligent is that they are individually addressable so that they are able to send information to the central control station thereby pinpointing the exact location of the smoke. Some have the ability to automatically compensate for changing environments such as humidity and dirt accumulation. They can also be programmed to be more sensitive during certain times of the day, for instance when workers leave the area, sensitivity will increase. Intelligent spot type detectors are commonly placed below raised floors, on ceilings and above drop down ceilings. However modified spot detectors are also used in air handling ducts to detect possible fires within the HVAC (heating ventilation air conditioning) system as seen in **Figure 3**. By placing detectors near the exhaust and the intake of CRAC units (computer room air conditioners), detection can be accelerated.

Figure 2 (left)*Intelligent smoke detector***Figure 3 (right)***Duct smoke detector*

Air sampling smoke detection

Air sampling smoke detection, sometimes referred to as a “Very Early Smoke Detection” (VESD) system, is usually described as a high powered photoelectric detector. Air sampling systems use an advanced detection method using a very sensitive laser, much more powerful than the one contained in a common photoelectric detector. As the particles pass through the detector, the laser beam is able to distinguish them as dust or byproducts of combustion. An air sampling system is comprised of a network of pipes attached to a single detector, which continually draws air in and samples it. The pipes are typically made of PVC but can also be CPVC, EMT or copper. Depending on the space being protected and the configuration of multiple sensors, these systems can cover an area of 2,500 to 80,000 square feet (232 to 7,432 square meters). Despite the wide area of coverage, the sensors can be centrally located for ease of maintenance and repair. Smoke detection is dependent on three variables; the sensitivity of the detector, the clarity of the smoke path leading to the detector, and the density of the smoke once it reaches the detector. In an area such as a data center where the airflows are rapid, it becomes difficult to detect smoke with a spot-type detector especially in the incipient stage of a fire. This is what makes VESD an ideal smoke detection solution for high availability data centers. The air sampling system is designed to detect the particles of combustion such as those released from PVC wire during the initial stages of heat build up. When the smoke particles drift through the pipes and into the detector, a photo detector or a laser beam differentiates the particle as dust or as a byproduct of combustion. This detection process can be up to 1000 times more sensitive than a photoelectric or ionization smoke detector. These systems are capable of detecting byproducts of combustion in concentration as low as 0.003% obstruction per foot. A typical air-sampling detector is show in **Figure 4**.

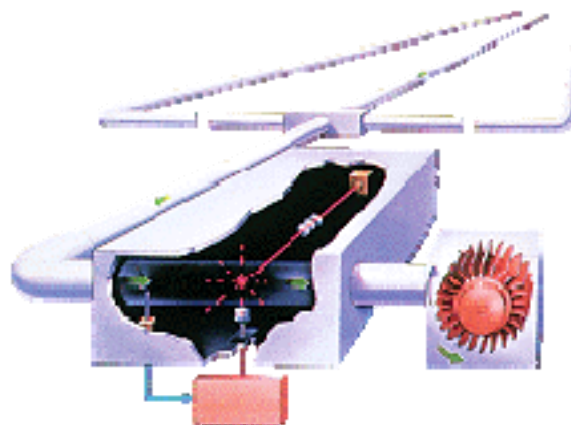Figure 4*Air sampling smoke detection system*

Fire suppression system types

Linear thermal detection

Linear thermal detection is a method of detecting “hot spots” in cable trays or cable runs. As a general rule it is not used in enclosed and air-conditioned computer rooms or data centers. Linear detection is more common in industrial applications that have long cable tray rooms, such as refineries, chemical plants, and power generation facilities. Linear thermal detection is composed of at least two heat dependant conductors. When a set temperature is reached, the two conductors cause an alarm condition that is detected at the main control panel. The control panel can then notify personnel and pinpoint the location of the hot spot. Linear thermal detection is capable of detecting heat anywhere along its length up to about 5,000 feet (1,524 meters) per zone.

Once a fire is detected in a data center, it is critical to quickly extinguish the fire with no effect on the data center operation. To do this various methods are used, some better than others. Regardless of the method employed, it should provide a means to abort the suppression system in the event of a false alarm.

Foam

Foam formally called, Aqueous Film-Forming Foams (AFFF), is generally used in liquid fires because when applied it floats on the surface of the flammable liquid. This prevents the oxygen from reaching the flames thereby extinguishing the fire. Foam is electrically conductive therefore should not be used anywhere where electricity is present. Needless to say it should not be used in data centers.

Dry chemical

Dry chemical or dry powder systems can be used on a wide variety of fires and pose little threat to the environment. Different types of powders can be used depending on the type of fire. They are electrically nonconductive but require clean up. They are used in many industrialized applications but are not recommended for data centers due to the residue left after discharge.

Water sprinkler system

Water sprinkler systems are designed specifically for protecting the structure of the building (**Figure 5**). Water sprinklers are discharged when the valve fuse opens. Fuses are usually solder or glass bulbs that open when they reach a temperature of 165-175°F. It is important to note that by the time the fuse opens the temperature around the sprinkler head may be as high as 1000°F. This has given rise to fast acting or quick-response sprinkler systems, which are basically the same but, open at a lower temperature. Water sprinkler systems are installed in three different configurations: wet-pipe, dry-pipe, and pre-action. Wet-pipe is by far the most common installation and is usually found in insulated buildings to prevent freezing. Dry-pipe systems are charged with compressed air or nitrogen to prevent freezing. Pre-action systems prevent accidental water discharge by requiring a combination of sensors to activate before allowing water to fill the sprinkler pipes. Normally water sprinklers are not recommended for data centers; however, depending on local fire codes they may be required. In this case a pre-action system would be recommended. Installing a sprinkler system during construction can range from \$1 - \$2 / ft² (\$3.28 - \$6.56 / m²), while retrofitting an existing building costs increase to \$2- \$3 / ft² (\$6.56 - \$9.84 / m²).

Figure 5*Water sprinkler*

Water mist system

Water mist systems discharge very fine droplets of water onto a fire. One drop ranges in size from 100 to 120 microns, which dramatically decreases water consumption. Because mist systems use less water than conventional sprinkler systems they require less storage space. Water mist systems are extremely safe and pose no threat to the environment. This fine mist of water extinguishes the fire by first absorbing heat from the fire. By absorbing the heat, vapor is produced causing a barrier between the flame and the oxygen needed to sustain it. It is this change of state (liquid to gas) that makes this water mist system so effective. (This is the same phenomenon that is used in evaporative cooling.) Typical applications include gas turbines, steam turbine generator bearings, generator sets, transformers and switchgear rooms. Water mist systems are gaining popularity due to its effectiveness. However, there is evidence to suggest that equipment failure can result from a discharge due to the high level of humidity introduced into the data center.

Fire extinguishers

Sometimes the oldest method of fire suppression is the best. Fire extinguishers these days are essentially the same as that have always been in that they are easy to use and can be operated by just about anyone. What makes fire extinguishers so valuable to data centers is the ability to extinguish a fire before the main suppression system discharges. As we noted before, the human nose is the best fire detector, which helps to extinguish a fire in its earliest stages.

Various types of fire extinguishers have been approved for use in data centers and replace Halon 1211. One such agent is HFC-236fa, or more commonly called by its trade name FE-36 and can be used in occupied areas (**Figure 6**). A few others include Halotron I, Halotron II, and Novec 1230. They are environmentally safe and leave no residue upon discharge since they are discharged as a gas. These clean agents extinguish fires by removing heat and chemically preventing combustion.

Figure 6*Clean agent fire extinguisher*

Total flooding fire extinguishing systems

Total flooding fire extinguishing systems, sometimes referred to as Clean Agent Fire Suppression Systems, can be used on Class A, B, and C fires. A gaseous agent flooding fire suppression system is highly effective in a well-sealed, confined area, which makes a data center an ideal environment. It typically takes less than 10 seconds for an agent to discharge and fill the room. The agent is contained in pressurized tanks as shown in **Figure 7**. The number of tanks used depends on the total volume of the room being protected as well as the type of agent used. The hidden areas in a data center present the biggest threat of fire. If wires are damaged, loose or otherwise poorly maintained in an open area, a routine visual inspection should uncover the problem and repairs can be made. Discovering a problem in a closed area is far more difficult. Unlike water suppression systems, gaseous agents infiltrate even the hardest to reach areas such as inside equipment cabinets. Later the gas and its byproducts can be vented out of the data center with very little environmental impact and no residue.

These agents are non-conductive, non-corrosive, and some can safely be discharged in occupied areas. The name “clean agents” is commonly used because they leave no residue and cause no collateral damage. For years Halon has been used as the agent of choice, however, it was phased out in commercial applications due to its ozone depletion properties. We will discuss Halon alternatives in the next section. The standard that guides total flooding suppression systems is NFPA 2001 – Standard on Clean Agent Fire Extinguishing System.



Figure 7

Gaseous agent cylinders

Gaseous agents

A fire-extinguishing agent is a gaseous chemical compound that extinguishes a fire, as a gas, by means of “suffocation” and or heat removal. Given a closed, well-sealed room, gaseous agents are very effective at extinguishing fires and leave no residue. Back in the 1960’s when Halon 1301 was introduced; it was widely used throughout various industries given its effectiveness in fighting fires. However, on January 1, 1994, under the Clean Air Act (CAA), the U.S. banned the production and import of Halons 1211, 1301, and 2402 in compliance with the Montreal Protocol on Substances That Deplete the Ozone Layer. Recycled Halon and inventories produced before January 1, 1994, are the only sources available today. Furthermore the EPA (Environmental Protection Agency) published the final rule (63 FR 11084) on March 5, 1998 that bans the production of any blend of Halon. However an exception was made for the purpose of aviation fire protection. In the midst of this ban came two U.S. standards: NFPA 2001 standard on Clean Agent Fire Extinguishing Systems and the Significant New Alternatives Policy (SNAP) from the (EPA). Under these standards alternative agents are evaluated based on their safety, effect on the environment and effectiveness.

Gaseous agents are divided into two categories; inert gases and fluorine based compounds. Note that the names of the agents are designated under the NFPA 2001 standard. *The names in parentheses are the trade names that they are normally referred to.*

Inert gases

Although there are other inert gas agents approved by NFPA 2001, IG-55(Pro-Inert), and IG-541(Inergen) are the most widely accepted and commercially available today. Some other inert gas agents listed in NFPA 2001 include: Carbon Dioxide (CO₂), IG-55 (Argonite), IG-100 (Nitrogen), and IG-01 (Argon),

- Carbon Dioxide

Carbon Dioxide or CO₂ is an inert gas, which reduces the concentration of oxygen needed to sustain a fire by means of physical displacement. Because CO₂ is heavier than oxygen, it settles to the base of the fire and quickly suffocates it. That makes this type of agent unsafe for discharge in occupied areas. As per the Standard (NFPA 12) these systems shall not be used in occupied areas and is therefore not recommended for data centers. If a CO₂ system is used in occupied areas because no suitable alternative is available, a proper evacuation plan should be in place and safety mechanisms should be used to notify personnel and evacuate the areas prior to a discharge. A safety mechanism would be one that provides audible and visual queues to data center occupants 30-60 seconds prior to discharge. CO₂ is non-conductive and non-damaging. Another disadvantage to the use of carbon dioxide is the large number of storage containers required for effective discharge. CO₂ is stored in tanks as a gas and occupies about 4 times the storage volume of Halon 1301. This is obviously a poor choice for any data center where floor space is highly valued. Some applications are transformer rooms, switch rooms, cable vaults, generators, and industrial processes.

- IG-55 (Pro-Inert) and IG-541 (Inergen)

Pro-Inert is an Inert gas composed of 50% Argon and 50% Nitrogen. Inergen is an inert gas composed of 52% Nitrogen, 40% Argon, and 8% Carbon Dioxide, all of which are found naturally in the atmosphere. For this reason it has a zero ozone depletion potential (ODP), an acceptably low global warming potential and does not produce any harmful products of decomposition. Inert agents are non-conductive, leave no residue and are safe to discharge in occupied areas. They are stored as a gas in high-pressure tanks that can be located up to 300 feet (91 meters) away from the protected space. This is convenient considering inert agents require a storage volume 10 times that of other alternatives available today, which would take up precious data center space. Furthermore to reduce the storage volume needed for systems protecting multiple rooms, selector valves can be used to direct the agent to the alarmed zone. Due to the quantity of agent that is being introduced into the protected space, the discharge of agent takes 60 seconds. Inert agents are used in data centers, telecommunications offices, and various other critical applications.

Fluorine based compounds

Although there are other alternative agents approved by NFPA 2001, FK-5-1-12 (3M Novec 1230 Fire Protection Fluid), HFC-125 (ECARO-25 / FE-25), and HFC-227ea (FM-200 / FE-227) are the most widely accepted and commercially available agents for the protection of high value assets.

- FK-5-1-12 (Novec 1230)

FK-5-1-12 is known as 3M Novec 1230 Fire Protection Fluid. It has a zero ozone depletion potential (ODP) and an extremely low global warming potential. FK-5-1-12 is stored as a liquid, is colorless, and is nearly odorless. Although at room temperature it is a liquid, it is discharged as an electrically non-conductive gas that leaves no residue and will not harm occupants; however, like in any other fire situation all occupants should evacuate the area as soon as an alarm sounds. FK-5-1-12 systems have about the same storage space requirement as conventional halocarbon agents. It extinguishes a fire by removing heat faster than it is generated and is discharged in 10 seconds or less.

- HFC-125 (ECARO-25 / FE-25)

HFC-125 is known under two commercial brands; ECARO-25 and FE-25. HFC-125 has a zero ozone depletion potential (ODP) and an acceptable global warming potential. It is odorless, colorless, and is stored as a liquefied compressed gas. It is discharged as an electrically non-conductive gas that leaves no residue and will not harm occupants. It can be used in occupied areas; however, like in any other fire situation all occupants should evacuate the area as soon as an alarm sounds. HFC-125 can be used with ceiling heights up to 16 feet (4.9 meters). The flow of HFC-125 is similar to Halon which presents an alternative for an actual drop-in Halon replacement since it can use the same pipe network distribution as an original Halon system. Flow calculation software must be used to verify that the agent can be distributed through the pipe network and comply with the NFPA 2001 standard and the manufactures UL FM Listing and Approvals. Due to its hydraulic properties it also requires less agent per unit weight than other chemical agents available today. HFC-125 floor space requirements are about the same as those of a Halon system. This agent chemically inhibits the combustion reaction by removing heat and is discharged in 10 seconds or less.

- HFC-227ea (FM-200 / FE-227)

HFC-227ea is known under two commercial brands; FE-200 and FE-227. HFC-227ea has a zero ozone depletion potential (ODP) and has an acceptable global warming potential. It is odorless, colorless, and is stored as liquefied compressed gas. HFC-227ea is discharged as an electrically non-conductive gas that leaves no residue and will not harm occupants; however, like in any other fire situation all occupants should evacuate the area as soon as an alarm sounds. It can be used with ceiling heights up to 16 feet (4.9 meters) and has a storage space requirement 1.7 times that of a Halon 1301 system. HFC-227ea chemically inhibits the combustion reaction by removing heat and is discharged in 10 seconds or less. This agent can be retrofitted into an existing Halon 1301 system but the pipe network must be replaced or an additional cylinder of nitrogen must be used to push the agent through the original Halon pipe network.

Pull stations and signaling devices

Pull stations allow a building occupant to notify everyone in the building of a fire. These should be placed at every exit to the protected space and once pulled can notify the fire department of the alarm (**Figure 8**). Pull stations are sometimes the best way to catch a fire in its incipient stage. No matter how sensitive a smoke detector may be, it is still no substitute for the human nose. A person can pick up the scent of smoke much earlier than any smoke detector can.



Figure 8

Pull station

Signaling devices are activated either after a pull station or a detector enters an alarm condition. Signaling devices provide audible and / or visual queues to building occupants as a signal to evacuate the building (**Figure 9**). Audible sounds may include horns, bells, sirens, and may be heard in various patterns. Sound levels range from 75 dBA to 100 dBA.

Visual signaling devices are crucial to notifying occupants who are hearing impaired. Strobes usually incorporate a Xenon flashtube that is protected by a clear protective plastic. They are designed with different light intensities measured in candela units. The minimum flash frequency for these strobes should be once per second.



Figure 9

Fire alarm strobe

Control systems

Regardless of the number of fire suppression and detection products in a building, they are useless without a control system commonly known as the fire alarm control panel (FACP). Control systems are the “brains” behind the building’s fire protection network. Every system discussed thus far is accounted for by the fire alarm control system. Fire alarm panels are either conventional panels or intelligent addressable panels working with detectors of the same type (conventional or intelligent / addressable) and with the same communication protocol. An example of one is shown in **Figure 10** below. Depending on the panel, it can control the sensitivity levels of various components such as smoke detectors and can be programmed to alarm only after a certain sequence of events have taken place. The computer programs used by these systems allow a user to set certain time delays, thresholds, passwords, and other features. Reports can be generated from most intelligent panels which can lead to improved performance of the fire protection system, by identifying faulty sensors for example. Once a detector, pull station or sensor is activated the control system automatically sets in motion a list of rules that have been programmed to take place. It can also provide valuable information to authorities.

All fire alarm control panels used in a suppression environment should be listed by UL for “releasing”. This approval guarantees that the control panel incorporates the necessary protocol and logic to activate and control a fire suppression system.

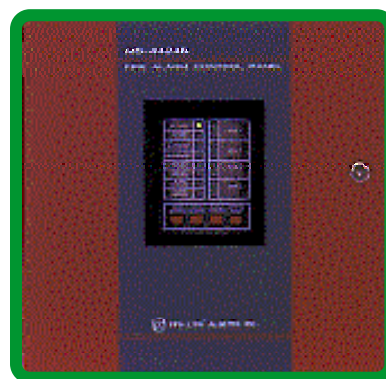


Figure 10

Fire control panel

Mission critical facilities

Now that all the fire protection components have been described, the last step is to bring them together to design a robust and highly available data center solution. It is important to note that while various types of detection, suppression, and gaseous agents were described, not all of them are recommended for a highly available data center. The following list of components compliments a data center goal of 7x24x365 uptime.

- Conventional spot-type detection
- Intelligent spot-type detection
- Air sampling smoke detection (VESD)
- Fire extinguishers
- Total flooding fire-extinguishing system
- Halon alternative clean agent
- Pull stations
- Signaling devices
- Control system / fire alarm control panel (FACP)

Spot-type detection with photoelectric detectors controlled by either a conventional or intelligent “releasing” panel should be used. Detectors should be placed in raised floors as well as in the main environment. A sequential detection configuration should be used. An initial alarm should not trigger the suppression system; it should prompt the control system to sound an alarm. When a second detector goes into alarm it will provide confirmation of a fire to the control panel and the panel will initiate a sequence to activate the suppression system in place. The activation of a pull station will activate an immediate release of the suppression system through the fire alarm control panel.

Redundant air sampling smoke detector systems should be placed beneath as well as above the raised floor. This is to prevent any accidental discharge of the clean agent. Both detection systems must enter an alarm state before the total flooding suppression system discharges. It is also recommended that intelligent spot-type detectors be positioned at every CRAC unit intake and exhaust. If any other ductwork enters the data center, duct smoke detectors should also be installed. Again, to prevent accidental discharge of the clean agent, no individual alarm should be able to trigger a discharge. The most specified Halon alternative clean agent systems available today are HFC-125 (ECARO-25 / FE-25 and HFC-227ea (FM-200 / FE-227) because of their small storage footprint and effectiveness. In addition to the total flooding fire-extinguishing system, fire code may require a sprinkler system to be installed. If this is the case, it must be a pre-action system to prevent accidental water damage to the data center. Clean agent fire extinguishers should be placed throughout the data center and in accordance with local fire codes. There should be pull stations as well as written procedures posted at every exit and signaling devices throughout the building capable of notifying all personnel inside of a fire.

The fire alarm control panel should be fault tolerant, programmable, and capable of monitoring all devices. It should also be capable of automatic system overrides. It should be a panel approved for “releasing” by UL. If the panel is protecting more than one suppression zone, all the detectors should be addressable therefore allowing the control panel to identify the precise location of any alarm. The control system is vital to the effectiveness of the suppression system. It must coordinate the sequence of events that take place immediately following the initial alarm. Some of these include sounding a separate evacuation alarm prior to discharge; closing ventilation dampers to prevent air from escaping, discharging the agent, and notifying the local authorities. And of course, all this is incomplete without well-written and effective emergency procedures, reinforced with regular training of all data center employees.

Raised floors

Raised floors bring up some important issues with regard to fire protection in mission critical facilities and are worth mentioning here. Raised floor tiles conceal power and data cables as well as any other combustible material such as paper and debris. Therefore it is recommended that all cabling be placed overhead where it is visible and can be easily inspected in case of a detected hot spot. When given the opportunity, raised floors become a breeding ground for human error that poses significant fire risks. In some cases boxes of paper have been stored under the floor. It may seem very natural to store material under a raised floor without thinking of the fire hazards imposed. For more information on raised floors see APC White Paper 19, *Re-examining the Suitability of the Raised Floor for Data Center Applications*. Lastly, raised floors increase the financial cost of properly protecting a data center. Because raised floors create a completely separate plenum, it must be protected with the same level of fire protection as the space above it. When systems like intelligent smoke detection and gaseous agent flooding are used, the cost could approach 1.25 times that of a non-raised floor environment.

 Link to resource
APC White Paper 19

Re-examining the Suitability of the Raised Floor for Data Center Applications

Industry best practices

The following is a list of recommend practices for increasing the availability of a data center with respect to fire protection.

- Ensure that the data center is built far from any other buildings that may pose a fire threat to the data center.
- Emergency procedures should be posted on all annunciator panels and fire alarm control panels.
- A fire alarm system (releasing panel) should incorporate multiple stages of alarm.
- A smoke purging system must be installed in the data center.
- All electrical panels must be free of any obstructions.
- All EPO buttons and fire alarm pull stations should be consistently labeled to avoid any confusion.
- All fire extinguisher locations should be clearly identified and should provide information on what kind of fire to use it on.
- Any openings in the data center walls should be sealed with an approved fireproof sealant.
- Each data center exit should have a list of emergency phone numbers clearly posted.
- Enforce a strict no smoking policy in IT and control rooms.
- EPO systems should not be activated by fire alarms.
- Equip the switchgear room with clean agent fire extinguishers.
- Fire dampers should be installed in all air ducts within the data center.
- Fire protection systems should be designed with maintainability in mind. Replacement parts and supplies should be stored on site. Systems should be easily accessible.
- Get approval from the fire marshal to continue operating the CRAC units when the fire system is in the alarmed state.
- If a facility is still using dry chemical extinguishers ensure that the computer room extinguishers are replaced with a Halon alternative.
- Pre-action sprinklers should be placed in the data center (if required by AHJ) as well as in the hallways.
- Provide a secondary water source for fire sprinklers.
- Sprinkler heads should be recessed into the ceiling to prevent accidental discharge.

- The annunciator panels should have emergency or operating procedures posted near them. Most annunciator panels are located in the security office and may also be located in the engineer's office.
- The fire suppression system should have a secondary suppression agent supply.
- The data center should be void of any trash receptacles.
- All office furniture in the data center must be constructed of metal. (Chairs may have seat cushions.)
- Tape libraries and record storage within the data center should be protected by an extinguishing system. It is recommended that they be stored in a fire safe vault with a fire rating of more than 1 hour.
- Any essential supplies such as paper, disks, wire ties, etc., should be kept in completely enclosed metal cabinets.
- UL approved extension cords used to connect computer equipment to branch circuits should not exceed 15 feet in length.
- The use of acoustical materials such as foam, fabric, etc. used to absorb sound is not recommended in a data center.
- The sprinkler system should be controlled from a different valve than the one used by the rest of the building.
- All data center personnel should be thoroughly trained on all fire detection and extinguishing systems throughout the data center. This training should be given on a regular basis.
- Air ducts from other parts of the building should never pass through the data center. If this is not possible then fire dampers must be used to prevent fire from spreading to the data center.
- Water pipes from other parts of the building should never pass through the data center.
- Duct coverings and insulation should have flame spread ratings less than 25 and a smoke developed rating less than 50.
- Air filters in the CRAC units should have a class 1 rating.
- Transformers located in the data center should be a dry type or should be filled with non-combustible dielectric.
- No extension cords or power cords should be run under equipment, mats, or other covering.
- All cables passing through the raised floor should be protected against chaffing by installing edge trim around all openings.
- Computer areas should be separated from other rooms in the building by fire-resistant-rated construction extending from structural floor slab to structural floor above (or roof).
- Avoid locating computer rooms adjacent to areas where hazardous processes take place.

Common mistakes

Some common mistakes made with regard to fire protection systems in a data center environment.

- Having the fire system automatically shut down the CRAC unit. This will cause the computer equipment to overheat resulting in downtime.
- Using dry chemical suppression agents to extinguish computer room fires will damage computer equipment. Dry chemical agents are very effective against fires but should not be used in a data center.
- Storing combustible materials underneath a data center raised floor.

Conclusion

Most fires in mission critical facilities can be prevented if common mistakes are avoided and fire detection is properly specified and monitored. Human error plays a large roll in preventing fire hazards and must be eliminated through training and procedures that are enforced.



About the author

Victor Avelar is a Senior Research Analyst at APC by Schneider Electric. He is responsible for data center design and operations research, and consults with clients on risk assessment and design practices to optimize the availability and efficiency of their data center environments. Victor holds a Bachelor's degree in Mechanical Engineering from Rensselaer Polytechnic Institute and an MBA from Babson College. He is a member of AFCOM and the American Society for Quality.



Resources

Click on icon to link to resource



Re-examining the Suitability of the Raised Floor for Data Center Applications

APC White Paper 19



APC White Paper Library

whitepapers.apc.com



APC TradeOff Tools™

tools.apc.com

References

1. www.dupont.com/fire
2. www.greatlakes.com
3. www.fike.com
4. www.fireline.com
5. www.hygood.co.uk
6. www.nfpa.org
7. www.vesda.com



Contact us

For feedback and comments about the content of this white paper:

Data Center Science Center, APC by Schneider Electric
DCSC@Schneider-Electric.com

If you are a customer and have questions specific to your data center project:

Contact your **APC by Schneider Electric** representative